



Installation Manual for SP02 Module Floodlight

1

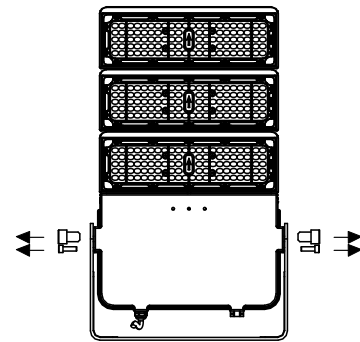


1. Loosen the screws and remove the bracket.

2

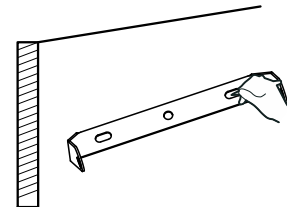


2. Determine the installation position.

3

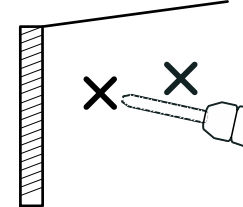


3. Drill holes on the building surface using a hammer drill.

4

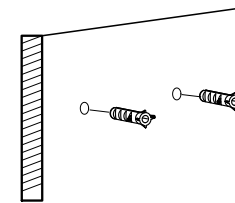


4. Insert the expansion bolts.

5

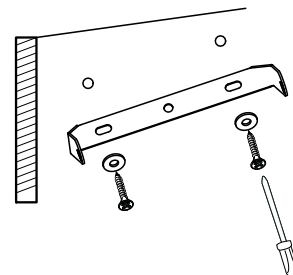


5. Fix the bracket.

6

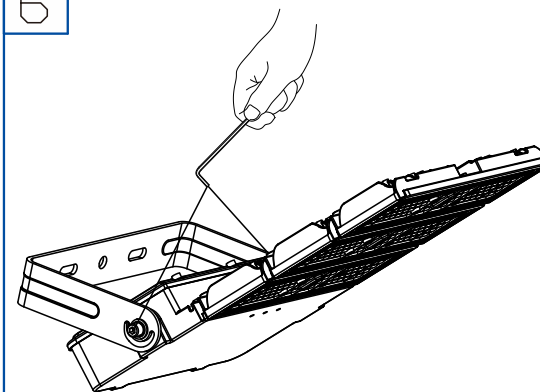


6. Install the lamp body and tighten the bracket screws.

7

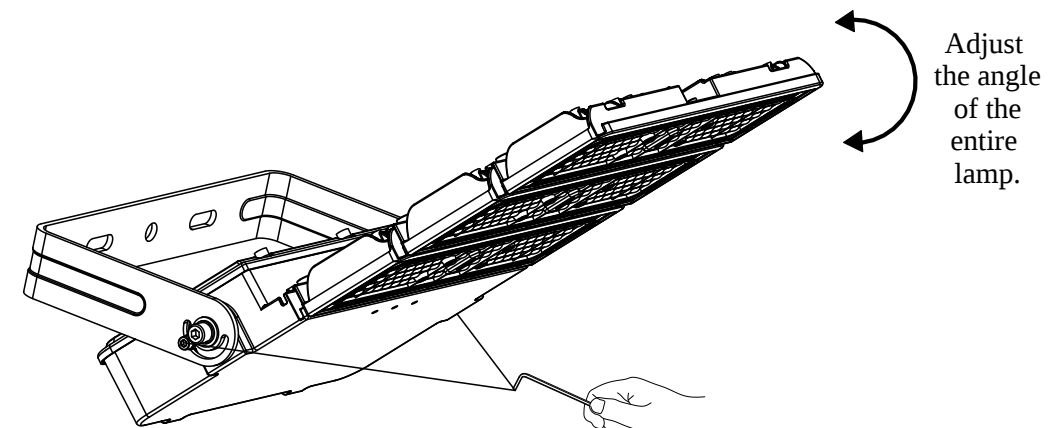

7. Adjust the angle of the whole lamp, adjustable angle 0 – 90°. After adjusting the angle, tighten the angle adjustment screw and the bracket fixing bolt.

8

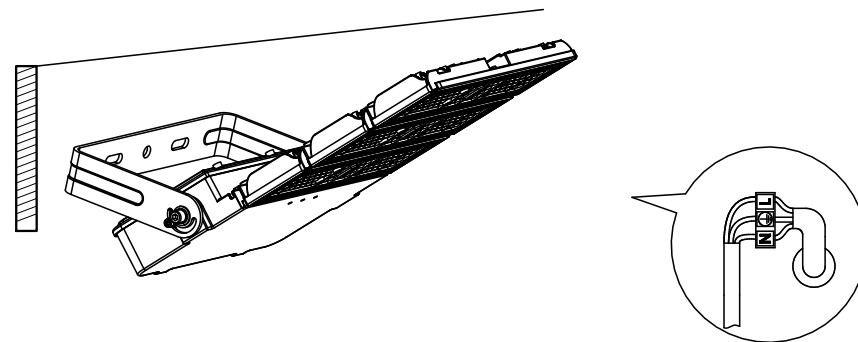

8. Connect the brown input wire to "L" (Live), the blue wire to "N" (Neutral), and the yellow-green wire to the ground terminal. After wiring, insulation and waterproof treatment must be applied using insulating tape and waterproof tape. The use of a professional waterproof junction box is recommended.