




ST07-Installation Instructions




1. Loosen the bracket screws and remove the bracket.




2. Determine the installation position.




3. Drill holes on the building surface with a hammer drill.

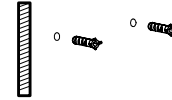


4. Insert expansion bolts.

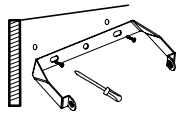


5. Secure the bracket with screws.

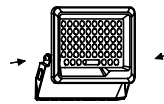


6. Install the floodlight housing, adjust the angle properly, and finally tighten the bracket screws to complete the installation.

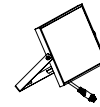


7. Take out the solar panel.

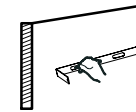


8. Determine the installation position.

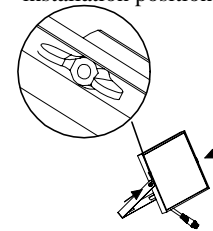


12. Install the solar panel, adjust the angle properly, then place the wing nut inside the aluminum frame and tighten the bracket screws to complete the installation.

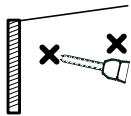


9. Drill holes on the building surface using a hammer drill.

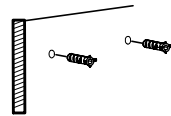

10. Insert expansion bolts.

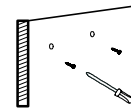

11. Secure the bracket with screws.

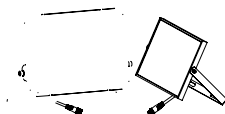

13. Connect the male and female connectors and tighten the plug-in cable.